



AIRCRAFT PARTS & SERVICES



Hawker Beechcraft Application List

P: 705-742-9725

www.kadexaero.com

Contact:

Description	OEM PN	Seginus PN	NHA Description	NHA PN	Aircraft	Aircraft Model Number
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	36
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	58
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	58
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	70
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	70
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	70
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	3005G MODEL LIST	Hawker Beechcraft	99
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	99
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	99
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	99
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	99
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL110Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	99
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	100
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	100
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	100
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	100
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	100
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	100
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	100
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	100
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	100
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	100
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	100
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	100
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	100
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	100
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	100
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	100
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	100
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	100
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	100
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	100

Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	100
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	100
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	100
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	100
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	200
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	200
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	200
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	200
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	200
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	200
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	200
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	200
Brush	420A20	EH420A20	BLOWER - BLOWER MOTOR	C175R-3A1, 60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	200
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	200

Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	200
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	200
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	300
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	300
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	300
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	300
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	300
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	300
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	300
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	300
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	300
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	300
Brush	R23088-1321	EHR23088-1321	STARTER GENERATOR	23088-X	Hawker Beechcraft	300
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	300
Brush	R23088-1321	EHR23088-1321	STARTER GENERATOR	23088-X	Hawker Beechcraft	300
Brush	MB56C-902-6	EHMB56C-902-6	BLOWER - BLOWER MOTOR	BC80G-5	Hawker Beechcraft	390
Brush	MB56C-902-6	EHMB56C-902-6	BLOWER - BLOWER MOTOR	BC80G-5	Hawker Beechcraft	390
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES, 23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	400
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	1900
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	1900
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	1900
Bearing	K271B-200L	EHK271B-200L	BLOWER - BLOWER MOTOR	C175R-3A1, 101384004-1, M3436MB	Hawker Beechcraft	1900
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	1900
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	1900
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	1900

Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	1900
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	1900
Brush	420A21	EH420A21	BLOWER - BLOWER MOTOR	101-384004-1, M3436MB	Hawker Beechcraft	1900
Brush	MB56J-902-1	EHMB56J-902-1	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9	Hawker Beechcraft	1900
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	1900
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	1900
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	1900
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	1900
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	58P
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C-12A)
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	1900C
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	1900C
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	1900C
Bearing	K271B-200L	EHK271B-200L	BLOWER - BLOWER MOTOR	C175R-3A1, 101384004-1, M3436MB	Hawker Beechcraft	1900C
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	1900C
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	1900C
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	1900C
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	1900C
Brush	420A21	EH420A21	BLOWER - BLOWER MOTOR	101-384004-1, M3436MB	Hawker Beechcraft	1900C
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	1900C
Brush	R30300-1414	EHR30300-1414	STARTER GENERATOR	23080-064	Hawker Beechcraft	1900C
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	1900C
Brush	R30300-1414	EHR30300-1414	STARTER GENERATOR	23080-064	Hawker Beechcraft	1900C
Brush	R30300-1414	EHR30300-1414	STARTER GENERATOR	23080-064	Hawker Beechcraft	1900C
Brush	R30300-1414	EHR30300-1414	STARTER GENERATOR	23080-064	Hawker Beechcraft	1900C
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	1900C (C-12J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900C (C-12J)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	1900C (C-12J)

Brush	MB56J-902-1	EHMB56J-902-1	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9	Hawker Beechcraft	1900C (C-12J)
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	1900C (C-12J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900C (C-12J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900C (C-12J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900C (C-12J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900C (C-12J)
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	1900D
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	1900D
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	1900D
Bearing	K271B-200L	EHK271B-200L	BLOWER - BLOWER MOTOR	C175R-3A1, 101384004-1, M3436MB	Hawker Beechcraft	1900D
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	1900D
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900D
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	1900D
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	1900D
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	1900D
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	1900D
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	1900D
Brush	MB56J-902-1	EHMB56J-902-1	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9	Hawker Beechcraft	1900D
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	1900D
Brush	R30300-1414	EHR30300-1414	STARTER GENERATOR	23080-064	Hawker Beechcraft	1900D
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	1900D
Brush	R30300-1414	EHR30300-1414	STARTER GENERATOR	23080-064	Hawker Beechcraft	1900D
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	1900D
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900D
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900D
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900D
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	1900D
Brush	R30300-1414	EHR30300-1414	STARTER GENERATOR	23080-064	Hawker Beechcraft	1900D
Brush	R30300-1414	EHR30300-1414	STARTER GENERATOR	23080-064	Hawker Beechcraft	1900D

Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	200C
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	200C
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200C
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200C
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200C
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200C
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200C
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200C
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200C
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200C
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	3005G MODEL LIST	Hawker Beechcraft	200C
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	200C
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200C
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200C
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200C
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200C
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200C
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200C
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	200CT
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	200CT
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	200CT
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200CT
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200CT
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200CT
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200CT

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200CT
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	200CT
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	200CT
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	200CT
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200CT
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200CT
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200CT
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200CT
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200CT
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	200T
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	200T
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	200T
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200T
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200T
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200T
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200T
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200T
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200T
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200T
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200T
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200T
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	200T
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	200T
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	200T
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	200T

Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200T
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200T
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	200T
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200T
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	200T
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200T
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200T
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200T
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	200T
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	300LW
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	300LW
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	300LW
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	45 (YT-34)
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	45 (YT-34)
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	58P
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	58TC
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	58TC
Brush	420A20	EH420A20	BLOWER - BLOWER MOTOR	C175R-3A1, 60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	65-90
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99A
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99A
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99A
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99A
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	99A
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99A
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99A
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99A

Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	99A
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	99A
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	A100
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100 (U-21F)
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100 (U-21F)
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100 (U-21F)
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100 (U-21F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100 (U-21F)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100 (U-21F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100 (U-21F)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A100 (U-21F)
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	A100 (U-21F)
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	A100 (U-21F)
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100 (U-21F)
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100 (U-21F)
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100 (U-21F)
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100 (U-21F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100 (U-21F)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100 (U-21F)

Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100 (U-21F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100 (U-21F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100 (U-21F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100 (U-21F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100 (U-21F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100-1 (-21J)
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100-1 (U-21J)
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100-1 (U-21J)
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100-1 (U-21J)
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100-1 (U-21J)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100-1 (U-21J)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100-1 (U-21J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100-1 (U-21J)
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100-1 (U-21J)
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100-1 (U-21J)
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100-1 (U-21J)
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100-1 (U-21J)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100-1 (U-21J)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100-1 (U-21J)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100-1 (U-21J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100-1 (U-21J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100-1 (U-21J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100-1 (U-21J)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100-1 (U-21J)
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	A100A
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	A100A

Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL111Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	A100A
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100C
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100C
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100C
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100C
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100C
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100C
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100C
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A100C
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	A100C
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	A100C
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100C
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100C
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100C
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A100C
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100C
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100C
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A100C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100C
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A100C
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL111Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	A100C

Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A11 (U-21F)
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C-12A)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200 (C-12A)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200 (C-12A)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C-12A)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C-12A)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12A)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C12C)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C12C)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200 (C12C)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200 (C12C)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200 (C-12C)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200 (C-12C)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200C
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C (C-12C)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C (C-12C)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C (C-12C)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (C-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (C-12F)

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (C-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (C-12F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C (UC-12B)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C (UC-12B)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (UC-12B)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200C (UC-12B)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200C (UC-12B)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C (UC-12B)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C (UC-12B)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200C (UC-12B)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (UC-12B)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (UC-12B)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (UC-12B)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200C (UC-12B)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12D)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12D)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (C-12D)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (C-12D)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12D)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12D)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12D)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C12F)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12F)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (C-12F)

Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (C-12F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12F)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12F)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (C-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (C-12F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (FWC-12D)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (FWC-12D)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12D)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12D)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (RC-12D)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (RC-12D)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12D)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12D)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12D)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12D)

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12D)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12G)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12G)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12G)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (RC-12G)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (RC-12G)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12G)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12G)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12G)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12G)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12G)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12G)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12G)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12H)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12H)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12H)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (RC-12H)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (RC-12H)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12H)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12H)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12H)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12H)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12H)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12H)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12H)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12K)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12K)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12K)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (RC-12K)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (RC-12K)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12K)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12K)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12K)

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12K)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12K)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12K)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12K)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12P)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12P)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12P)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (RC-12P)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (RC-12P)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12P)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12P)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12P)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12P)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12P)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12P)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12P)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A200CT (RC-12Q)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A200CT (RC-12Q)
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	A36

Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	A36TC
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	A45 (B-45)
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	A45 (B-45)
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	A45 (T-34A)
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	A45 (T-34A)
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	A65
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	A65
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	A65
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	A99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	A99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99A
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	A99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	A99A
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	A99A

Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B100
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B100
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B100
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B100
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B100
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B100
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B100
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	B100
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B100
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B100
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B100
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B100
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B100
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B100
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B100
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	B200
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	B200
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	B200
Bearing	K271B-200L	EHK271B-200L	BLOWER - BLOWER MOTOR	C175R-3A1, 101384004-1, M3436MB	Hawker Beechcraft	B200
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200

Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	B200
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B200
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B200
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200
Brush	420A21	EH420A21	BLOWER - BLOWER MOTOR	101-384004-1, M3436MB	Hawker Beechcraft	B200
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	B200C
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	B200C
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200C
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	B200C
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200C
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200C
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200C
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200C
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12F)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12F)
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200C (C-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (C-12F)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200C (C-12F)
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B200C (C-12F)
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B200C (C-12F)
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200C (C-12F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12F)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12F)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12F)
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200C (C-12F)
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200C (C-12F)
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200C (C-12F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12R)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12R)
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200C (C-12R)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (C-12R)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200C (C-12R)
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B200C (C-12R)

Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B200C (C-12R)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12R)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12R)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (C-12R)
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200C (C-12R)
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200C (C-12R)
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200C (C-12R)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12F)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12F)
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200C (UC-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12F)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200C (UC-12F)
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B200C (UC-12F)
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B200C (UC-12F)
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200C (UC-12F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12F)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12F)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12F)
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200C (UC-12F)
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200C (UC-12F)
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200C (UC-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12F)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12F)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12M)
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200C (UC-12M)
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12M)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12M)
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12M)
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200C (UC-12M)

Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200C (UC-12M)
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200C (UC-12M)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12M)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12M)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12M)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12M)
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200C (UC-12M0)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200C (UC-12M0)
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200C (UC-12M0)
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B200C (UC-12M0)
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B200C (UC-12M0)
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200C (UC-12M0)
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200C (UC-12R)
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	B200CT
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	B200CT
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200CT
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200CT
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200CT
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200CT
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200CT
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200CT
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200CT
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200CT
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200CT
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200CT
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200CT
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200CT
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200CT
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200CT

Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200CT
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	B200CT
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200CT
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200CT
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B200CT
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B200CT
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200CT
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200CT
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200CT
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200CT
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200CT
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200CT
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200CT
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200CT
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200CT
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200CT
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200CT
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200CT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200CT
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200GT
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200GT
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200GT
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200GT
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200GT
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200GT
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200GT

Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200GT
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200GT
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200GT
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200GT
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200GT
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	B200T
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	B200T
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200T
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	B200T
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200T
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200T
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200T
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200T
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200T
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200T
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200T
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200T
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200T
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200T
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200T
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B200T
Bearing	ST102-2	EHST102-2	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200T
Brush	MB57A-902-1	EHMB57A-902-1	BLOWER - BLOWER MOTOR	BA128E-1, BA128E-3, BA128E-5, BA128E-7	Hawker Beechcraft	B200T
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B200T
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B200T
Brush	40-9-3004	EH40-9-3004	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B200T
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200T
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200T
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200T

Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B200T
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200T
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200T
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B200T
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B200T
Bearing	ST102-9	EHST102-9	BLOWER - BLOWER MOTOR	BC80G-5, 101-384176-3, BC89A-1	Hawker Beechcraft	B200T
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200T
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	B200T
Bearing	K271B-200EL	EHK271B-200EL	BLOWER - BLOWER MOTOR	60-384002-5, 60-384002-7, M4941Z-1A, C241-500B	Hawker Beechcraft	B200T
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	B300
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	B300
Bearing	9000-14	EH9000-14	BLOWER - BLOWER MOTOR	101-384004-5, 101-384004-9	Hawker Beechcraft	B300
Bearing	K271B-200L	EHK271B-200L	BLOWER - BLOWER MOTOR	C175R-3A1, 101384004-1, M3436MB	Hawker Beechcraft	B300
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B300
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B300
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B300
Brush	420A21	EH420A21	BLOWER - BLOWER MOTOR	101-384004-1, M3436MB	Hawker Beechcraft	B300
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	B300
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	B300
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B300
Bearing	K271B-200L	EHK271B-200L	BLOWER - BLOWER MOTOR	C175R-3A1, 101384004-1, M3436MB	Hawker Beechcraft	B300C
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B300C
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	B300C
Brush	420A21	EH420A21	BLOWER - BLOWER MOTOR	101-384004-1, M3436MB	Hawker Beechcraft	B300C
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B300C
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B300C (MC-12W)
Bearing	ST102-6	EHST102-6	BLOWER - BLOWER MOTOR	114-380028-9, BC80A-9, 101-384176-3, BC89A-1, BC80G-5	Hawker Beechcraft	B300C (UC-12W)
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	B36TC

Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	B60
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	B60
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	B60
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B90
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B90
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B90
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B90
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B90
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	B90
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B99
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B99
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B99
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B99
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	B99
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B99
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B99
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B99
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	B99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	B99
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	B99

Bearing	400SG1052-13	EH400SG1052-13	STARTER GENERATOR	400SG MODEL LIST	Hawker Beechcraft	Bae. 125 series 800A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series (C-29A)
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	BAe.125 Series 1000A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	BAe.125 Series 1000B
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095 SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	Bae.125 Series 800A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	BAe.125 Series 800A (C-29A)
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095 SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	BAe.125 Series 800A (C-29A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (C-29A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (C-29A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (C-29A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (C-29A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (U-125)
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	BAe.125 Series 800A (U-125)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (U-125)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (U-125)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (U-125)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800A (U-125)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	BAe.125 Series 800B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	BAe.125 Series 800B

Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	BAe.125 Series 800B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	BH.125 Series 400A
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	BH.125 Series 400A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	BH.125 Series 600A
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	BH.125 Series 600A
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	C90
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	C90
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	C90
Brush	P601952	EHP601952	STARTER GENERATOR	8160-14	Hawker Beechcraft	C90
Bearing	R16-1	EHR16-1	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	C90
Bearing	R8-4	EHR8-4	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	C90
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	C90A
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	C90A
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90A
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90A
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90A
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	C90A
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	C90A

Brush	P601952	EHP601952	STARTER GENERATOR	8160-14	Hawker Beechcraft	C90A
Bearing	R16-1	EHR16-1	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	C90A
Bearing	R8-4	EHR8-4	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	C90A
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90A
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90A
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	C90A
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	C90A
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C90A
Bearing	50-380158-1	EH50-380158-1	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	C90GT
Bearing	R16-1	EHR16-1	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	C90GT
Bearing	R8-4	EHR8-4	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	C90GT
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	C99
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	C99
Bearing	9000-35	EH9000-35	BLOWER - BLOWER MOTOR	101-384716-1	Hawker Beechcraft	C99
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	C99
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	C99
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	C99

Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	C99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C99
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Hawker Beechcraft	C99
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	C99
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	C99
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	C99
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	C99
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	C99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C99
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	C99
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Hawker Beechcraft	C99
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	D45 (T-34B)
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Hawker Beechcraft	D45 (T-34B)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	DH.125 Series 1A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	DH.125 Series 1A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	DH.125 Series 1A/R-522
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	DH.125 Series 1A/S-522
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	DH.125 Series 1A-522
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	DH.125 Series 3A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	DH.125 Series 3A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	DH.125 Series 3A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	DH.125 Series 3A

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	DH.125 Series 3A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	DH.125 Series 3A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	DH.125 Series 3A/R
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	DH.125 Series 3A/RA
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	DH.125 Series 400A
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	DH.125 Series 400A
Bearing	B320250L	EHB320250L	STARTER GENERATOR	8260-121, 8260-123	Hawker Beechcraft	Dornier Model 328-100
Bearing	B320250L	EHB320250L	STARTER GENERATOR	8260-121, 8260-123	Hawker Beechcraft	Dornier Model 328-300
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	DS.125 Series 1A
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	DS.125 Series 3A
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	E55
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	E55
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	E90
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	E90
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	E90
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	E90
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	E90
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	E90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	E90
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	E90
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	E90
Bearing	50-380158-1	EH50-380158-1	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	E90
Bearing	R16-1	EHR16-1	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	E90
Bearing	R8-4	EHR8-4	LANDING GEAR RETRACT MOTOR GEARBOX	91-810010	Hawker Beechcraft	E90
Bearing	S11K	EHS11K	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	E90
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	E90

Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	E90
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	E90
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	E90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	E900200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	E900200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	E900200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	E900200
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	F90
Bearing	9000-13	EH9000-13	BLOWER - BLOWER MOTOR	90-384031-1, 114-380028-5, 114-380028-11, 101-384135-3, 101-384004-5, 101384004-9	Hawker Beechcraft	F90
Bearing	24001129	EH24001129	COMPRESSOR DRIVE MOTOR-BLOWER	100-384072-5, 101-384100-1	Hawker Beechcraft	F90
Bearing	26541101-1	EH26541101-1	COMPRESSOR DRIVE MOTOR-BLOWER	100-384072-5	Hawker Beechcraft	F90
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	F90
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	F90
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	F90
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	F90
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	F90
Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	F90
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	F90
Brush	26501123-1	EH26501123-1	COMPRESSOR DRIVE MOTOR-BLOWER	100-384072-5	Hawker Beechcraft	F90
Brush	35-2-3001	EH35-2-3001	BLOWER - BLOWER MOTOR	90-384031-1, 101384716-1, 114-380028-5, 114-380028-11, 101384135-3	Hawker Beechcraft	F90
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Hawker Beechcraft	F90
Bearing	7107KR	EH7107KR	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	F90
Bearing	115-380102	EH115-380102	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	F90
Bearing	115-380103	EH115-380103	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	F90
Bearing	201PP	EH201PP	MAIN LANDING GEAR ACTUATOR	99-810057-651, 99-810057-652, 99-810057-653, 99-810057-654	Hawker Beechcraft	F90
Bearing	50-380043	EH50-380043	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	F90

Bearing	50-380044	EH50-380044	NOSE GEAR ACTUATOR	50-820208-5	Hawker Beechcraft	F90
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	F90
Bearing	9000-11	EH9000-11	LANDING GEAR MOTOR	90-810010-5, 115-380002-5	Hawker Beechcraft	F90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	F90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	F90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	F90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	F90
Brush	26501123-1	EH26501123-1	COMPRESSOR DRIVE MOTOR-BLOWER	100-384072-5	Hawker Beechcraft	F90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	F90
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 1000
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 1000
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES, 23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	Hawker 1000
Bearing	001687-12	EH001687-12	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 1000
Cup Washer	81701516	EH81701516	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 1000
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 1000XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 1000XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 1000XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 1000XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 4000
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 750
Bearing	400SG1052-13	EH400SG1052-13	STARTER GENERATOR	400SG MODEL LIST	Hawker Beechcraft	Hawker 800
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	Hawker 800
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES, 23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	Hawker 800
Bearing	001687-12	EH001687-12	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 800
Cup Washer	81701516	EH81701516	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 800
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	03-6010-19	EH03-6010-19	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800 (U-125A)

Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800 (U-125A)
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095 SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	001687-12	EH001687-12	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 800 (U-125A)
Cup Washer	81701516	EH81701516	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	03-6010-19	EH03-6010-19	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	03-6010-19	EH03-6010-19	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800 (U-125A)
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800XP
Bearing	03-6010-19	EH03-6010-19	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800XP
Bearing	400SG1052-13	EH400SG1052-13	STARTER GENERATOR	400SG MODEL LIST	Hawker Beechcraft	Hawker 800XP
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	Hawker 800XP
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800XP
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095 SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	Hawker 800XP
Bearing	001687-12	EH001687-12	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 800XP
Cup Washer	81701516	EH81701516	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 800XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	Hawker 800XP
Bearing	03-6010-19	EH03-6010-19	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800XP
Bearing	03-6010-19	EH03-6010-19	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 800XP
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 850XP
Bearing	001687-12	EH001687-12	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 850XP
Cup Washer	81701516	EH81701516	AC GENERATOR	BA02801-1	Hawker Beechcraft	Hawker 850XP
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	Hawker 900XP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 F3B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 F3B

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 F3B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 F3B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 1B
Brush	R23080-1902	EHR23080-1902	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 1B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 1B/R-522
Brush	R23080-1902	EHR23080-1902	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 1B/R-522
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 1B/S-522
Brush	R23080-1902	EHR23080-1902	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 1B/S-522
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 1B-522
Brush	R23080-1902	EHR23080-1902	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 1B-522
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 3B
Brush	R23080-1902	EHR23080-1902	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 3B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 3B/R
Brush	R23080-1902	EHR23080-1902	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 3B/R
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 3B/RA
Brush	R23080-1902	EHR23080-1902	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 3B/RA
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 3B/RB
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 3B/RC
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 400A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 400B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 400B/1
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 401B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 403A (C)
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 403B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 600A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 600A
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES, 23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	HS.125 Series 600A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 600A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 600A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 600A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 600A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 600B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 600B/1
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 600B/2

Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 600B/3
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700A
Bearing	400SG1052-13	EH400SG1052-13	STARTER GENERATOR	400SG MODEL LIST	Hawker Beechcraft	HS.125 series 700A
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	HS.125 Series 700A
Cup Washer	81701333	EH81701333	AC GENERATOR	BA00501-X	Hawker Beechcraft	HS.125 Series 700A
Cup Washer	81701266	EH81701266	AC GENERATOR	BA00501-X	Hawker Beechcraft	HS.125 Series 700A
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 700A
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	HS.125 Series 700A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700A
Cup Washer	81701333	EH81701333	AC GENERATOR	BA00501-X	Hawker Beechcraft	HS.125 Series 700A
Cup Washer	81701266	EH81701266	AC GENERATOR	BA00501-X	Hawker Beechcraft	HS.125 Series 700A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700B
Bearing	400SG1052-13	EH400SG1052-13	STARTER GENERATOR	400SG MODEL LIST	Hawker Beechcraft	HS.125 series 700B
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	HS.125 Series 700B
Cup Washer	81701333	EH81701333	AC GENERATOR	BA00501-X	Hawker Beechcraft	HS.125 Series 700B
Cup Washer	81701266	EH81701266	AC GENERATOR	BA00501-X	Hawker Beechcraft	HS.125 Series 700B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series 700B
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Hawker Beechcraft	HS.125 Series 700B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series 700B
Cup Washer	81701333	EH81701333	AC GENERATOR	BA00501-X	Hawker Beechcraft	HS.125 Series 700B
Cup Washer	81701266	EH81701266	AC GENERATOR	BA00501-X	Hawker Beechcraft	HS.125 Series 700B
Brush	MB56C-902-1	EHMB56C-902-1	BLOWER - BLOWER MOTOR	101-384176-3, BC89A-1	Hawker Beechcraft	HS.125 Series 800A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series F3B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series F3B

Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series F3B/RA
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series F400B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series F400B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series F400B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series F400B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series F400B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series F400B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series F403B
Brush	R23080-1903	EHR23080-1903	STARTER GENERATOR	23080-064	Hawker Beechcraft	HS.125 Series F600B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	HS.125 Series F600B3B
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	MU-300-10
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	MU-300-10
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	MU-300-10
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	MU-300-10
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Hawker Beechcraft	MU-300-10
Bearing	9000-12	EH9000-12	BLOWER - BLOWER MOTOR	90-384031-1, 101-384716-1, 114-380028-5, 114-380028-9, BC80A-9, 114-380028-11, 101-384135-3	Hawker Beechcraft	V35B