



## EADS Casa Application List

P: 705-742-9725

[www.kadexaero.com](http://www.kadexaero.com)

Contact:



Description	OEM PN	Seginus PN	NHA Description	NHA PN	Aircraft	Aircraft Model Number
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS Casa	C-212-CB
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	EADS Casa	C-212-CB
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	EADS CASA	C-212-CB
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS CASA	C-212-CB
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS Casa	C-212-CC
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	EADS Casa	C-212-CC
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	EADS CASA	C-212-CC
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS CASA	C-212-CC
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS Casa	C-212-CD
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	EADS Casa	C-212-CD
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	EADS CASA	C-212-CD
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS CASA	C-212-CD
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS Casa	C-212-CE
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	EADS Casa	C-212-CE
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	EADS CASA	C-212-CE
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS CASA	C-212-CE
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS Casa	C-212-CF
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	EADS Casa	C-212-CF
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	EADS CASA	C-212-CF
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS CASA	C-212-CF
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS Casa	C-212-DE
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	EADS Casa	C-212-DE
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	EADS CASA	C-212-DE

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS CASA	C-212-DE
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS Casa	C-212-DF
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	EADS Casa	C-212-DF
Brush	30300-1284	EH30300-1284	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	EADS CASA	C-212-DF
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	EADS CASA	C-212-DF
Brush	P601952	EHP601952	STARTER GENERATOR	8160-14	EADS CASA	CN-235
Bearing	B320250L	EHB320250L	STARTER GENERATOR	8260-121, 8260-123	EADS Casa	CN-235-100
Bearing	B320050L	EHB320050L	STARTER GENERATOR	8260-121, 8260-123	EADS Casa	CN-235-100
Bearing	B320250L	EHB320250L	STARTER GENERATOR	8260-121, 8260-123	EADS CASA	CN-235-100
Bearing	B320050L	EHB320050L	STARTER GENERATOR	8260-121, 8260-123	EADS CASA	CN-235-100
Brush	P601952	EHP601952	STARTER GENERATOR	8160-14	EADS CASA	CN-235-100
Bearing	B320250L	EHB320250L	STARTER GENERATOR	8260-121, 8260-123	EADS Casa	CN-235-200
Bearing	B320050L	EHB320050L	STARTER GENERATOR	8260-121, 8260-123	EADS Casa	CN-235-200
Bearing	B320250L	EHB320250L	STARTER GENERATOR	8260-121, 8260-123	EADS CASA	CN-235-200
Bearing	B320050L	EHB320050L	STARTER GENERATOR	8260-121, 8260-123	EADS CASA	CN-235-200
Brush	P601952	EHP601952	STARTER GENERATOR	8160-14	EADS CASA	CN-235-200
Bearing	B320250L	EHB320250L	STARTER GENERATOR	8260-121, 8260-123	EADS Casa	CN-235-300
Bearing	B320050L	EHB320050L	STARTER GENERATOR	8260-121, 8260-123	EADS Casa	CN-235-300
Bearing	B320250L	EHB320250L	STARTER GENERATOR	8260-121, 8260-123	EADS CASA	CN-235-300
Bearing	B320050L	EHB320050L	STARTER GENERATOR	8260-121, 8260-123	EADS CASA	CN-235-300
Brush	P601952	EHP601952	STARTER GENERATOR	8160-14	EADS CASA	CN-235-300