



AIRCRAFT PARTS & SERVICES

## Embraer Application List

P: 705-742-9725

[www.kadexaero.com](http://www.kadexaero.com)

Contact:



Description	OEM PN	Seginus PN	NHA Description	NHA PN	Aircraft	Aircraft Model Number
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120ER
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120FC
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120QC
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120RT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-135BJ
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-135KE
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-135LR
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145ER
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145XR
Brushes	200SGL1009	200SGL1009EH	STARTER GENERATOR	200SGL111Q, 200SGL112Q, 20SGL115Q-2, 200SGL119Q, 200SGL121Q, 200SGL129Q, 200SGL131Q (4), 200SGL131Q, 200SGL142Q, 200SGL147Q, 200SGL111Q-2, 200SGL114Q, 200SGL117Q, 200SGL119Q-2, 200SGL124Q, 200SGL129Q (8), 200SGL131Q-2, 200SGL144Q, 200SGL111Q-3, 200SGL115Q, 200SGL118Q, 200SGL120Q, 200SGL129Q, 200SGL130Q, 200SGL132Q, 200SGL145Q	Embraer	EMB-110P1
Brushes	200SGL1009-3	200SGL1009-3EH	STARTER GENERATOR	200SGL111Q, 200SGL118Q, 200SGL129Q, 200SGL129Q (5), 200SGL142Q, 200SGL115Q, 200SGL119Q, 200SGL129Q (1), 200SGL130Q, 200SGL147Q, 200SGL115Q-2, 200SGL119Q-2, 200SGL129Q (3), 200SGL131Q	Embraer	EMB-110P1
Brushes	200SGL1009-7	200SGL1009-7EH	STARTER GENERATOR	200SGL111Q, 200SGL118Q	Embraer	EMB-110P1

Brushes	200SGL1009-10X2	200SGL1009-10X2EH	STARTER GENERATOR	200SGL111Q, 200SGL117Q, 200SGL129Q, 200SGL130Q, 200SGL132Q-4, 200SGL144Q, 200SGL147Q-3, 200SGL111Q-3, 200SGL118Q, 200SGL129Q (4), 200SGL132Q, 200SGL132Q-5, 200SGL147Q, 200SGL151Q, 200SGL115Q, 200SGL124Q, 200SGL129Q (8), 200SGL132Q-3, 200SGL142Q, 200SGL147Q-2, 200SGL153Q	Embraer S.A	EMB-110P1
Brushes	200SGL1009	200SGL1009EH	STARTER GENERATOR	200SGL111Q, 200SGL112Q, 200SGL115Q-2, 200SGL119Q, 200SGL121Q, 200SGL129Q, 200SGL131Q (4), 200SGL131Q, 200SGL142Q, 200SGL147Q, 200SGL111Q-2, 200SGL114Q, 200SGL117Q, 200SGL119Q-2, 200SGL124Q, 200SGL129Q (8), 200SGL131Q-2, 200SGL144Q, 200SGL111Q-3, 200SGL115Q, 200SGL118Q, 200SGL120Q, 200SGL129Q, 200SGL130Q, 200SGL132Q, 200SGL145Q	Embraer	EMB-110P2
Brushes	200SGL1009-3	200SGL1009-3EH	STARTER GENERATOR	200SGL111Q, 200SGL118Q, 200SGL129Q, 200SGL129Q (5), 200SGL142Q, 200SGL115Q, 200SGL119Q, 200SGL129Q (1), 200SGL130Q, 200SGL147Q, 200SGL115Q-2, 200SGL119Q-2, 200SGL129Q (3), 200SGL131Q	Embraer	EMB-110P2
Brushes	200SGL1009-7	200SGL1009-7EH	STARTER GENERATOR	200SGL111Q, 200SGL118Q	Embraer	EMB-110P2
Brushes	200SGL1009-10X2	200SGL1009-10X2EH	STARTER GENERATOR	200SGL111Q, 200SGL117Q, 200SGL129Q, 200SGL130Q, 200SGL132Q-4, 200SGL144Q, 200SGL147Q-3, 200SGL111Q-3, 200SGL118Q, 200SGL129Q (4), 200SGL132Q, 200SGL132Q-5, 200SGL147Q, 200SGL151Q, 200SGL115Q, 200SGL124Q, 200SGL129Q (8), 200SGL132Q-3, 200SGL142Q, 200SGL147Q-2, 200SGL153Q	Embraer S.A	EMB-110P2
Bearing	03-6010-10	EH03-6010-10	STARTER GENERATOR	23080-031	Embraer	EMB-120
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120
Bearing	03-6010-14	EH03-6010-14	STARTER GENERATOR	23080-019	Embraer	EMB-120
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES, 23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-120
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES, 23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-120
Brush	775688-2	775688-2EH	BRUSH BLOCK ASSEMBLY	EMB-120	Embraer	EMB-120

Bearing	03-6010-10	EH03-6010-10	STARTER GENERATOR	23080-031	Embraer	EMB-120
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120
Brushes	400SG1009-7	400SG1009-7EH	STARTER GENERATOR	1152106-2 SERIES 1, 1152106-3 SERIES 1, 1152106-2 SERIES 2, 1152106-3 SERIES 2	Embraer S.A	EMB-120
Bearing	03-6010-10	EH03-6010-10	STARTER GENERATOR	23080-031	Embraer	EMB-120ER
Bearing	03-6010-14	EH03-6010-14	STARTER GENERATOR	23080-019	Embraer	EMB-120ER
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-120ER
Brush	775688-2	775688-2EH	BRUSH BLOCK ASSEMBLY	EMB-120	Embraer	EMB-120ER
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120ER
Brushes	400SG1009-7	400SG1009-7EH	STARTER GENERATOR	1152106-2 SERIES 1, 1152106-3 SERIES 1, 1152106-2 SERIES 2, 1152106-3 SERIES 2	Embraer S.A	EMB-120ER
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB120FC
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-120FC
Brush	775688-2	775688-2EH	BRUSH BLOCK ASSEMBLY	EMB-120	Embraer	EMB-120FC
Brushes	400SG1009-7	400SG1009-7EH	STARTER GENERATOR	1152106-2 SERIES 1, 1152106-3 SERIES 1, 1152106-2 SERIES 2, 1152106-3 SERIES 2	Embraer S.A	EMB-120FC
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-120QC
Brush	775688-2	775688-2EH	BRUSH BLOCK ASSEMBLY	EMB-120	Embraer	EMB-120QC
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120QC
Brushes	400SG1009-7	400SG1009-7EH	STARTER GENERATOR	1152106-2 SERIES 1, 1152106-3 SERIES 1, 1152106-2 SERIES 2, 1152106-3 SERIES 2	Embraer S.A	EMB-120QC
Bearing	03-6010-10	EH03-6010-10	STARTER GENERATOR	23080-031	Embraer	EMB-120RT
Bearing	03-6010-14	EH03-6010-14	STARTER GENERATOR	23080-019	Embraer	EMB-120RT
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-120RT
Brush	775688-2	775688-2EH	BRUSH BLOCK ASSEMBLY	EMB-120	Embraer	EMB-120RT

Bearing	03-6010-10	EH03-6010-10	STARTER GENERATOR	23080-031	Embraer	EMB-120RT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-120RT
Brushes	400SG1009-7	400SG1009-7EH	STARTER GENERATOR	1152106-2 SERIES 1, 1152106-3 SERIES 1, 1152106-2 SERIES 2, 1152106-3 SERIES 2	Embraer S.A	EMB-120RT
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-135ER
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-135KE
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-135KL
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-135LR
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145
Bearing	400SG1052-13	EH400SG1052-13	STARTER GENERATOR	400SG MODEL LIST	Embraer	EMB-145
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-145
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-145EP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145EP
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-145ER
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145ER
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145LR
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-145LR
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145LR
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145MP

Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-145MP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145MP
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145MR
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-145MR
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145MR
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES,23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Embraer	EMB-145XR
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Embraer	EMB-145XR
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 170-100 LR
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 170-100 LR
O-Ring	15800-3598	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 170-100 LR
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 170-100 LR
Nut Self-Locking	J1212OP04	J1212OP04EH	ENGINE GE-CFM1	CF6-80A-BOEING, CF6-80C2 BOEING, CF-80E, CF34-3A1/3B1 series, ERJ170, ERJ175, CF34-8C series, CF34-8E series, CF34-10E series, CFM56-5 series, CFM56-5A series, GE90 series	Embraer	ERJ 170-100 LR
Nut Self-Locking	J1212OP05	J1212OP05EH	ENGINE GE-CFM1	CF6-80E series, CFM56-5B series, CFM56-5C series, CFM56-7B series, GE90, ERJ170, ERJ175, Boeing 737 series	Embraer	ERJ 170-100 LR
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 170-100 LR
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 170-100 SE
O-Ring	15800-3598	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 170-100 SE

Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 170-100 SE
Nut Self-Locking	J1212OP04	J1212OP04EH	ENGINE GE-CFM1	CF6-80A-BOEING, CF6-80C2 BOEING, CF-80E, CF34-3A1/3B1 series, ERJ170, ERJ175, CF34-8C series, CF34-8E series, CF34-10E series, CFM56-5 series, CFM56-5A series, GE90 series	Embraer	ERJ 170-100 SE
Nut Self-Locking	J1212OP05	J1212OP05EH	ENGINE GE-CFM1	CF6-80E series, CFM56-5B series, CFM56-5C series, CFM56-7B series, GE90, ERJ170, ERJ175, Boeing 737 series	Embraer	ERJ 170-100 SE
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 170-100 SE
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 170-100 STD
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 170-100 STD
O-Ring	15800-3598	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 170-100 STD
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly		Embraer	ERJ 170-100 STD
Nut Self-Locking	J1212OP04	J1212OP04EH	ENGINE GE-CFM1	CF6-80A-BOEING, CF6-80C2 BOEING, CF-80E, CF34-3A1/3B1 series, ERJ170, ERJ175, CF34-8C series, CF34-8E series, CF34-10E series, CFM56-5 series, CFM56-5A series, GE90 series	Embraer	ERJ 170-100 STD
Nut Self-Locking	J1212OP05	J1212OP05EH	ENGINE GE-CFM1	CF6-80E series, CFM56-5B series, CFM56-5C series, CFM56-7B series, GE90, ERJ170, ERJ175, Boeing 737 series	Embraer	ERJ 170-100 STD
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 170-100 STD
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 170-100 SU
O-Ring	15800-3598	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 170-100 SU
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 170-100 SU
Nut Self-Locking	J1212OP04	J1212OP04EH	ENGINE GE-CFM1	CF6-80A-BOEING, CF6-80C2 BOEING, CF-80E, CF34-3A1/3B1 series, ERJ170, ERJ175, CF34-8C series, CF34-8E series, CF34-10E series, CFM56-5 series, CFM56-5A series, GE90 series	Embraer	ERJ 170-100 SU

Nut Self-Locking	J1212OP05	J1212OP05EH	ENGINE GE-CFM1	CF6-80E series, CFM56-5B series, CFM56-5C series, CFM56-7B series, GE90, ERJ170, ERJ175, Boeing 737 series	Embraer	ERJ 170-100 SU
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 170-100 SU
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 170-100SE
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 170-100SU
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 170-200 LR
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 170-200 LR
O-Ring	15800-3598	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 170-200 LR
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 170-200 LR
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 170-200 LR
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 170-200 LR
Nut Self-Locking	J1212OP04	J1212OP04EH	ENGINE GE-CFM1	CF6-80A-BOEING, CF6-80C2 BOEING, CF-80E, CF34-3A1/3B1 series, ERJ170, ERJ175, CF34-8C series, CF34-8E series, CF34-10E series, CFM56-5 series, CFM56-5A series, GE90 series	Embraer	ERJ 170-200 LR
Nut Self-Locking	J1212OP05	J1212OP05EH	ENGINE GE-CFM1	CF6-80E series, CFM56-5B series, CFM56-5C series, CFM56-7B series, GE90, ERJ170, ERJ175, Boeing 737 series	Embraer	ERJ 170-200 LR
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 170-200 LR
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 170-200 STD
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 170-200 STD
O-Ring	15800-3598	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 170-200 STD
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 170-200 STD

Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 170-200 STD
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 170-200 STD
Nut Self-Locking	J1212OP04	J1212OP04EH	ENGINE GE-CFM1	CF6-80A-BOEING, CF6-80C2 BOEING, CF-80E, CF34-3A1/3B1 series, ERJ170, ERJ175, CF34-8C series, CF34-8E series, CF34-10E series, CFM56-5 series, CFM56-5A series, GE90 series	Embraer	ERJ 170-200 STD
Nut Self-Locking	J1212OP05	J1212OP05EH	ENGINE GE-CFM1	CF6-80E series, CFM56-5B series, CFM56-5C series, CFM56-7B series, GE90, ERJ170, ERJ175, Boeing 737 series	Embraer	ERJ 170-200 STD
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 170-200 STD
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 170-200 SU
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 170-200 SU
O-Ring	15800-3598	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 170-200 SU
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 170-200 SU
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 170-200 SU
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 170-200 SU
Nut Self-Locking	J1212OP04	J1212OP04EH	ENGINE GE-CFM1	CF6-80A-BOEING, CF6-80C2 BOEING, CF-80E, CF34-3A1/3B1 series, ERJ170, ERJ175, CF34-8C series, CF34-8E series, CF34-10E series, CFM56-5 series, CFM56-5A series, GE90 series	Embraer	ERJ 170-200 SU
Nut Self-Locking	J1212OP05	J1212OP05EH	ENGINE GE-CFM1	CF6-80E series, CFM56-5B series, CFM56-5C series, CFM56-7B series, GE90, ERJ170, ERJ175, Boeing 737 series	Embraer	ERJ 170-200 SU
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 170-200 SU
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 190-100 ECJ
O-Ring	15800-3598	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 190-100 ECJ



Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 190-100 ECJ
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 190-100 ECJ
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 190-100 ECJ
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 190-100 ECJ
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 190-100 IGW
O-Ring	15800-359-8	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 190-100 IGW
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 190-100 IGW
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 190-100 IGW
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 190-100 IGW
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 190-100 IGW
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 190-100 LR
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 190-100 LR
O-Ring	15800-359-8	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 190-100 LR
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 190-100 LR
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 190-100 LR
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 190-100 LR
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 190-100 LR
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 190-100 STD

Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 190-100 STD
O-Ring	15800-359-8	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 190-100 STD
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 190-100 STD
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 190-100 STD
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 190-100 STD
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 190-100 STD
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 190-100ECJ
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 190-100IGW
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 190-200 IGW
O-Ring	15800-359-8	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 190-200 IGW
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 190-200 IGW
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 190-200 IGW
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 190-200 IGW
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 190-200 IGW
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 190-200 LR
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 190-200 LR
O-Ring	15800-359-8	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 190-200 LR
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 190-200 LR

Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 190-200 LR
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 190-200 LR
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 190-200 LR
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 190-200 STD
Spacer, Non-Metallic	1008607-1	1008607-1EH	HIGH STAGE BLEED VALVE	1001246-2	Embraer	ERJ 190-200 STD
O-Ring	15800-359-8	15800-359-8EH	RINSE VALVE, VACUUM TOILET	14330	Embraer	ERJ 190-200 STD
Bowl Elbow	14330-196	14330-196EH	Toilet Assembly	15800-022-1, 15800-022-2, 15800-029 (-1 thru 4, -7, -8), 14330-04 (L1, L2, L3, L4, M1, M2, M3, M4), 14330-004(A1, A2, B1, B2) 14330-008- (-1, -2), 14330-004(C1, C2, C3, C4), 77000, 38000-150	Embraer	ERJ 190-200 STD
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ 190-200 STD
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ 190-200 STD
Housing Assembly, Scroll	24805489-4	24805489-4EH	VACCUUM GENERATOR ASSEMBLY MODEL	14330-375	Embraer	ERJ 190-200 STD
Plate Slide	14330-235	14330-235EH	ORBITAL FLUSH VALVE ASSEMBLY	14330-SERIES	Embraer	ERJ 190-200IGW
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ-100 LR
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ-100 LR
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ-100 STD
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ-100 STD
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ-170-100 SE
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ-170-100 SE
Flashtube Lamp	31-8321-1	31-8321-1EH	POSITION/ANTI-COLLISION LIGHT	30-2722-1	Embraer	ERJ-170-100 SU
Flashtube Lamp	31-9172-1	31-9172-1EH	STROBE LIGHT ASSEMBLY	30-2778-1	Embraer	ERJ-170-100 SU