



Mitsubishi Application List

P: 705-742-9725

www.kadexaero.com

Contact:



Description	OEM PN	Seginus PN	NHA Description	NHA PN	Aircraft	Aircraft Model Number
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-10
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-10
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-15
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-15
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-20
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-20
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Mitsubishi	MU-2B-20
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-20
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi	MU-2B-20
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-25
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-25
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Mitsubishi	MU-2B-25
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-25
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-26
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-26
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Mitsubishi	MU-2B-26
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Mitsubishi	MU-2B-26
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-26
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi	MU-2B-26
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-26A
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-26A
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Mitsubishi	MU-2B-26A
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-26A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi	MU-2B-26A
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-30
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Mitsubishi	MU-2B-30
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-30

Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-35
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-35
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Mitsubishi	MU-2B-35
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-35
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi	MU-2B-35
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-36
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-36
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Mitsubishi	MU-2B-36
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Mitsubishi	MU-2B-36
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-36
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi	MU-2B-36
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-36A
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-36A
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Mitsubishi	MU-2B-36A
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-36A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi	MU-2B-36A
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-40
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-40
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Mitsubishi	MU-2B-40
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-40
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi	MU-2B-40
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-2B-60
Brush	30300-1413	EH30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-60
Brush	30300-1286	EH30300-1286	STARTER GENERATOR	23048-016, 23046 Series, 23048 Series	Mitsubishi	MU-2B-60
Brush	R30300-1413	EHR30300-1413	STARTER GENERATOR	23085-Series (028, 029, 030, 031, 005)	Mitsubishi	MU-2B-60
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi	MU-2B-60
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Mitsubishi Heavy Industries, LTD	MU-300
Magnetic Speed Pick-Up	SP-1	EHSP-1	STARTER GENERATOR	23080-SERIES, 23081-SERIES, 23085-SERIES, 23095-SERIES, 8260-121, 8160-121, 200SG-SERIES, 300SG SERIES, 400SG-SERIES	Mitsubishi	MU-300