



AIRCRAFT PARTS & SERVICES

Viking Air Limited Application List

P: 705-742-9725

www.kadexaero.com

Contact:



Description	OEM PN	Seginus PN	NHA Description	NHA PN	Aircraft	Aircraft Model Number
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Viking Air Limited	DHC-2 Mk. I
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Viking Air Limited	DHC-2 Mk. II
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Viking Air Limited	DHC-2 Mk. III
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Viking Air Limited	DHC-6-1
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Viking Air Limited	DHC-6-1
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Viking Air Limited	DHC-6-1
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Viking Air Limited	DHC-6-1
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Viking Air Limited	DHC-6-100
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Viking Air Limited	DHC-6-100
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Viking Air Limited	DHC-6-100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Viking Air Limited	DHC-6-100
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Viking Air Limited	DHC-6-100
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Viking Air Limited	DHC-6-200
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Viking Air Limited	DHC-6-200
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Viking Air Limited	DHC-6-200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Viking Air Limited	DHC-6-200
Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Viking Air Limited	DHC-6-200
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Viking Air Limited	DHC-6-300
Bearing	250SG1052-B	EH250SG1052-B	STARTER GENERATOR	300SG MODEL LIST	Viking Air Limited	DHC-6-300
Brush	30010-1026	EH30010-1026	STARTER GENERATOR	23048 Series	Viking Air Limited	DHC-6-300
Bearing	03-6010-18	EH03-6010-18	STARTER GENERATOR	23080-Series (001, 025-1, 005, 064, 013, 014, 002, 059, 031, 032)	Viking Air Limited	DHC-6-300

Bearing	250SG1052	250SG1052EH	STARTER GENERATOR	250SG111Q, 250SG112Q, 250SG114Q, 250SG115Q, 250SG116Q, 250SG117Q, 250SG123Q, 300SGL11Q-1, 300SGL115Q, 300SGL116Q, 300SGL127Q-1, 300SGL127Q-3, 300SGL127Q-4, 300SGL145Q, 300SGL146Q	Viking Air Limited	DHC-6-300
Brush	738466-6	EH738466-6	BRUSH BLOCK ASSEMBLY	782689-1 THRU -6	Viking Air Limited (Bombardier)	DHC-7-1
Brushes	300SGL1009-5	300SGL1009-5EH	STARTER GENERATOR	300SGL111Q-1, 300SGL115Q, 300SGL118Q, 300SGL127Q-2, 300SGL129Q, 300SGL138Q-4, 300SGL146Q, 300SGL150Q, 300SGL162Q, 300SGL111Q-2, 300SGL116Q, 300SGL126Q, 300SGL127Q-3, 300SGL129Q-2, 300SGL138Q-5, 300SGL146Q-2, 300SGL153Q, 300SGL162Q-2, 300SGL114Q, 300SGL116Q-2, 300SGL127Q-1, 300SGL127Q-4, 300SGL138Q-2, 300SGL139Q, 300SGL146Q-3, 300SGL157Q, 300SGL162Q-3	Viking Air Limited	DHC-7-1
Brush	738466-6	EH738466-6	BRUSH BLOCK ASSEMBLY	782689-1 THRU -6	Viking Air Limited (Bombardier)	DHC-7-100
Brushes	300SGL1009-5	300SGL1009-5EH	STARTER GENERATOR	300SGL111Q-1, 300SGL115Q, 300SGL118Q, 300SGL127Q-2, 300SGL129Q, 300SGL138Q-4, 300SGL146Q, 300SGL150Q, 300SGL162Q, 300SGL111Q-2, 300SGL116Q, 300SGL126Q, 300SGL127Q-3, 300SGL129Q-2, 300SGL138Q-5, 300SGL146Q-2, 300SGL153Q, 300SGL162Q-2, 300SGL114Q, 300SGL116Q-2, 300SGL127Q-1, 300SGL127Q-4, 300SGL138Q-2, 300SGL139Q, 300SGL146Q-3, 300SGL157Q, 300SGL162Q-3	Viking Air Limited	DHC-7-100
Brush	738466-6	EH738466-6	BRUSH BLOCK ASSEMBLY	782689-1 THRU -6	Viking Air Limited (Bombardier)	DHC-7-101
Brushes	300SGL1009-5	300SGL1009-5EH	STARTER GENERATOR	300SGL111Q-1, 300SGL115Q, 300SGL118Q, 300SGL127Q-2, 300SGL129Q, 300SGL138Q-4, 300SGL146Q, 300SGL150Q, 300SGL162Q, 300SGL111Q-2, 300SGL116Q, 300SGL126Q, 300SGL127Q-3, 300SGL129Q-2, 300SGL138Q-5, 300SGL146Q-2, 300SGL153Q, 300SGL162Q-2, 300SGL114Q, 300SGL116Q-2, 300SGL127Q-1, 300SGL127Q-4, 300SGL138Q-2, 300SGL139Q, 300SGL146Q-3, 300SGL157Q, 300SGL162Q-3	Viking Air Limited	DHC-7-101
Brush	738466-6	EH738466-6	BRUSH BLOCK ASSEMBLY	782689-1 THRU -6	Viking Air Limited (Bombardier)	DHC-7-102

Brushes	300SGL1009-5	300SGL1009-5EH	STARTER GENERATOR	300SGL111Q-1, 300SGL115Q, 300SGL118Q, 300SGL127Q-2, 300SGL129Q, 300SGL138Q-4, 300SGL146Q, 300SGL150Q, 300SGL162Q, 300SGL111Q-2, 300SGL116Q, 300SGL126Q, 300SGL127Q-3, 300SGL129Q-2, 300SGL138Q-5, 300SGL146Q-2, 300SGL153Q, 300SGL162Q-2, 300SGL114Q, 300SGL116Q-2, 300SGL127Q-1, 300SGL127Q-4, 300SGL138Q-2, 300SGL139Q, 300SGL146Q-3, 300SGL157Q, 300SGL162Q-3	Viking Air Limited	DHC-7-102
Brush	738466-6	EH738466-6	BRUSH BLOCK ASSEMBLY	782689-1 THRU -6	Viking Air Limited (Bombardier)	DHC-7-103
Brushes	300SGL1009-5	300SGL1009-5EH	STARTER GENERATOR	300SGL111Q-1, 300SGL115Q, 300SGL118Q, 300SGL127Q-2, 300SGL129Q, 300SGL138Q-4, 300SGL146Q, 300SGL150Q, 300SGL162Q, 300SGL111Q-2, 300SGL116Q, 300SGL126Q, 300SGL127Q-3, 300SGL129Q-2, 300SGL138Q-5, 300SGL146Q-2, 300SGL153Q, 300SGL162Q-2, 300SGL114Q, 300SGL116Q-2, 300SGL127Q-1, 300SGL127Q-4, 300SGL138Q-2, 300SGL139Q, 300SGL146Q-3, 300SGL157Q, 300SGL162Q-3	Viking Air Limited	DHC-7-103